EVACUATION PLAN

SALISBURY THEATRE, FS311

FINE ARTS/ DAVIS CONCERT HALL FLOOR 2



CALL 911

FIRE POLICE MEDICAL

IN CASE OF FIRE, PULL FIRE ALARM. USE EXIT STAIRS, CLOSE ALL WINDOWS AND DOORS. DO NOT USE ELEVATOR




FIRE ALARM WILL SOUND AS CHIRPING ELECTRICAL HORN. STROBE LIGHT WILL FLASH.

PERSONS WITH DISABILITIES

CALL 911, REPORT YOUR LOCATION. PROCEED TO THE NEAREST EXIT OR EXIT STAIRWELL AND AWAIT ASSISTANCE.



EVACUATION SITE

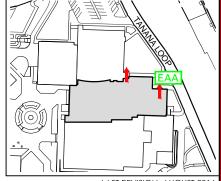

SYMBOL LEGEND





FIRE EXTINGUISHER



STAIRS



FIRST AID

EMERGENCY ASSEMBLY AREA



YOU ARE HERE

LAST REVISION: AUGUST 2016 FOR REVISIONS OR COPIES CONTACT DDC DRAFTING AT UAF-DDC-CADD@ALASKA.EDU

ALARM PULL STATION

LIBRARY