EVACUATION PLAN

SALISBURY THEATRE, FS311

FLOOR 2



IN CASE OF FIRE, PULL FIRE ALARM. USE EXIT STAIRS, CLOSE ALL WINDOWS AND DOORS. DO NOT USE ELEVATOR



FIRE ALARM WILL SOUND AS CHIRPING ELECTRICAL HORN. STROBE LIGHT WILL FLASH.

MEDICAL

PERSONS WITH DISABILITIES

CALL 911, REPORT YOUR LOCATION. PROCEED TO THE NEAREST EXIT OR EXIT STAIRWELL AND AWAIT ASSISTANCE.



EVACUATION SITE



SYMBOL LEGEND **EMERGENCY EGRESS PATH**



STAIRS

FINE ARTS/ DAVIS CONCERT HALL



LIBRARY

FIRST AID

EMERGENCY ASSEMBLY AREA

ALARM PULL STATION

FIRE EXTINGUISHER



YOU ARE HERE

LAST REVISION: AUGUST 2016 FOR REVISIONS OR COPIES CONTACT DDC DRAFTING AT UAF-DDC-CADD@ALASKA.EDU